



Swan

designed for life



3 in 1 Can opener

with bottle opener & knife sharpener
Model: SP20110N

Help line

0333 220 6050

v2.2





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven. Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.
- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

 
 
 
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- Do not touch the moving parts and do not insert any kind of object(knives, forks, spoons etc.) while the product is operating.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas, in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- NEVER IMMERSE THE UNIT IN WATER





HOW TO USE

Attach blade bracket to the can opener. Make the key tabs align with the key slots, then turn the bracket to lock it into place. (see illustration below)

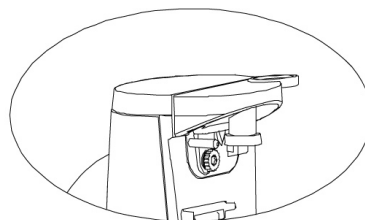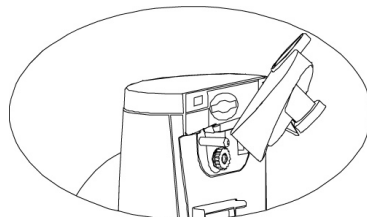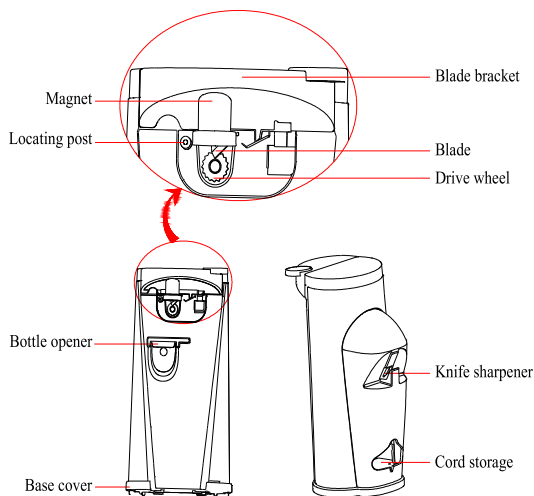


Lift the blade bracket, tip the can so that its rim is under the locating post, the lid of the can will be attracted by the magnet, then press down the right side of blade bracket, making sure the blade is inside the rim (see illustration below), drive wheel will actuate the can to rotate and the blade will cut the can open. Because of the hands-free feature, it is not necessary to hold blade bracket down or support the can during cutting. However, you may have to hold the housing of can opener when cutting very tall or heavy cans.

When the can is opened, the can opener will stop automatically, to remove the can, hold it with one hand and raise the blade bracket with the other.

Caution: Avoid contacting with the cut edges of the can or lids as they are sharp. Carefully remove the lid from the magnet and discard.

Note: The time of opening cans continuously should not exceed 5 times without a rest periods of 15 seconds between every 5 cans. This is to allow the motor to cool sufficiently.

 You may feed excess cord into the back of the unit and feed the cord through the notch for convenient storage.

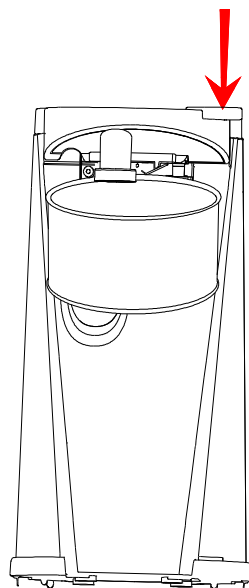

Swan

5





HOW TO USE

 
 
CAN OPENING TIPS

1. This can opener should not be used to open cans designed to be opened by another method, such as a pull tab, peel-off foil seal, or rolling key. This can opener will not open rimless cans or cans with angled corners.
2. If there is a dent in the rim of a can, open the other end or start the cutting action just beyond the dent. Cans with heavy seams, uneven rims or odd shapes may cause the can opener to stall. If this occurs, turn the can slightly by hand to aid the cutting action.
3. Frozen juices or foods in cardboard cans should be opened as soon as they are removed from the freezer. Aluminium lids will not stick to the magnet.

TO OPEN BOTTLES or SHARPEN KNIVES

Unplug the power supply

To open a bottle, grasp it and position the cap under the metal hook part in the bottle opener (see illustration).

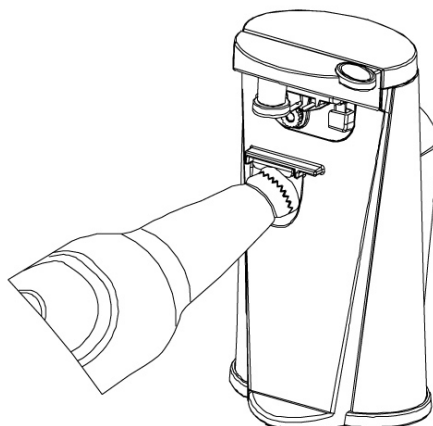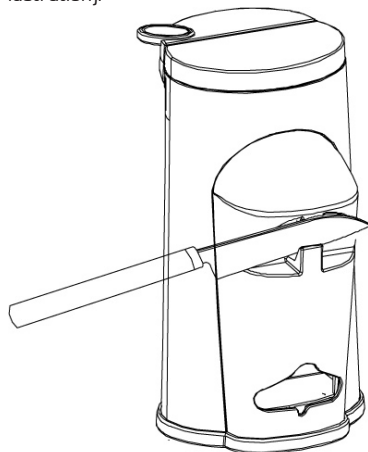

BOTTLES

Important: Be sure the metal hook part is not under the bottle neck, or the glass may break. Hold the can opener with one hand and pull down to pop the cap off with the other one. The bottle opener at the front of the unit will only remove metal bottle caps. Do not use it for screw-off caps, punch in tabs, or on cans with pull ring.

Knife Sharpening

Unplug the power supply, and then place the knife which is intended to be sharpened in the slot of knife sharpener at the back of the unit. For best results, sharpen the entire length carefully pulling the knife through the slot back and forth (see illustration above), until you achieve desired sharpness. After sharpening, wash and dry the knife.

Note: Use caution with knife after sharpening.

KNIFE SHARPENING TIPS

1. Clean and dry knives before sharpening.
2. Do not attempt to sharpen serrated blades, as this will smooth their edges.
3. Do not attempt to sharpen scissors.





IMPORTANT INFORMATION

- Suitable for round cans 50mm to 100mm in diameter and 178mm max in height.
- If the weight of the can is over 510g, it is necessary to press and hold the can opener to avoid overturning.
- **NOTE:** The time of opening cans continuously should not exceed 1 minute
- **WARNING:** The cans opened with this Can Opener must be less than 0.6kg in weight.



CLEANING

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE. PLEASE TAKE EXTREME CARE WHEN HANDLING SHARP PARTS

Always turn the appliance "OFF" and remove the plug from the electrical outlet before cleaning it.

Wipe the outside with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.

Wash the accessories and blades in hot soapy water. Rinse and dry.

Do not put accessories in the dishwasher



TECHNICAL DATA

Description: 3 in 1

Model: SP20110N

Input Voltage: 230V, Frequency: 50Hz, Power consumption: 60 Watts





NOTES





NOTES





IMPORTANT INFORMATION

- Suitable for round cans 50mm to 100mm in diameter and 178mm max in height.
- If the weight of the can is over 510g, it is necessary to press and hold the can opener to avoid overturning.
- **NOTE:** The time of opening cans continuously should not exceed 1 minute
- **WARNING:** The cans opened with this Can Opener must be less than 0.6kg in weight.



CLEANING

COMPLETELY CLEAN AND DRY ALL PARTS AFTER EVERY USE. PLEASE TAKE EXTREME CARE WHEN HANDLING SHARP PARTS

Always turn the appliance "OFF" and remove the plug from the electrical outlet before cleaning it.

Wipe the outside with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.

Wash the accessories and blades in hot soapy water. Rinse and dry.

Do not put accessories in the dishwasher



TECHNICAL DATA

Description: 3 in 1

Model: SP20110N

Input Voltage: 230V, Frequency: 50Hz, Power consumption: 60 Watts





WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red.

WARNING: THIS APPLIANCE IS DOUBLE INSULATED. DO NOT CONNECT ANY WIRE TO EARTH TERMINAL



DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

