



Sound Panel User Guide

This guide has been written to help you get the most from your Sound Panel. Please ensure that you read this fully as it contains important information on setting up your panel. Failure to follow this advice may result in damage to the Sound Panel and invalidate your warranty.

Keep this guide in a safe place for future reference.



Unpacking

1. Sound Panels are shipped in specialist packaging, designed to protect the panel from damage during transport.
2. Ensure that the packaging is carefully removed from around the panel. Keep the packaging in case the Sound Panel needs to be returned.
3. Take care not to lift the Sound Panel by the sides as this can cause damage. Always lift from the top and bottom.
4. The power supply (12V DC 1.5A) for the panel is taped into the bottom. This power lead is around 1,5M in length. You will also find the hanging bracket packed at the back of the panel, in the top section.
5. If you find any damage when you unpack you should report it within **7 days** to your supplier.
6. If repairs are not completed by Apollo Creative this will void warranty and we will not be held liable for any damage or injury caused.

Setting up

1. The Sound Panel must be attached to a solid wall using fixings appropriate to the construction of the solid wall. These are not supplied by Apollo Creative.
2. Attach the metal hanging bracket to the wall, ensuring accurate measurements. The Sound Panel should be hung on this bar once it is attached to wall correctly.
3. Please note that when hanging the panel we recommend a minimum of 50mm from the floor to allow for the height.
4. Ensure that the power cable from the Sound Plus panel is plugged into a suitably grounded mains socket and that there is no tension in the power cable.
5. The cable should never be coiled around the power supply, as this may cause it to overheat.
6. The Sound Plus panel is now ready to use. The Sound Panel is activated by sound, simply clap, stomp, shout or play your own music to activate the coloured lights.
7. There are two modes of lighting effects for the Sound Panel. Press the white button on the side of the white cover to the preferred lighting effect.
8. In the unlikely event of the panel not working fully, please contact your supplier within **7 days** of receiving the panel.

Potential risks & warnings

1. Read and understand all these instructions before using the Sound Panel.
2. Do not operate the panel with a damaged power cable, or if the unit has been dropped or damaged.
3. Position the power cable so that it will not be tripped over, pulled or come into contact with hot surfaces.
4. Always unplug the panel from the power socket before cleaning, servicing and when not in use. Never yank the cable to pull the plug from the outlet. Grasp the plug and pull to disconnect.
5. Always connect the Sound Panel to a grounded outlet.
6. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
7. Do not dismantle the Sound Panel, but contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.
8. This developmental aid appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or Instruction concerning use of the developmental aid appliance in a safe way and understand the hazards involved.
9. Children below this age must be supervised when using this developmental aid appliance. Cleaning and user maintenance shall not be made by children.
10. **Warning:** Only use the detachable supply unit provided with this appliance

This Sound Panel is supplied by:



**UK
CA**



We are a member of the WEEE
Compliance scheme

Registration : **WEE / MM4751AA**

Manufactured by:

Apollo Creative
Merlin House
Low Moor Lane
Knaresborough
North Yorkshire
HG5 9JB

T: 01423 798232

E: sales@apollocreative.co.uk

W: www.apollocreative.co.uk

