 


**HOPE**  
is all you need



P-2


## P-3

 Jack for Live broadcast output.\


### 23. MIC PRI

Press the key once to enter microphone priority mode.  
On MIC PRI mode, sound signal from microphone will be prior to music sound, that's to say, while signal from microphone sounds, background music will be automatically mute.

### Remote control

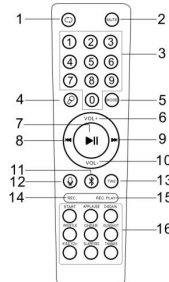

- |                        |                          |                         |
|------------------------|--------------------------|-------------------------|
| 1. REPEAT              | 2. MUTE                  | 3. NUMBER KEYS          |
| 4. MICROPHONE PRIORITY | 5. MODE                  | 6. VOLUME UP            |
| 7. PLAY/PAUSE          | 8. PREVIOUS              | 9. NEXT                 |
| 10. VOLUME DOWN        | 11. BLUE-TOOTH           | 12. Vocal accompaniment |
| 13. TWS function       | 14. RECORDING FUNCTION   | 15. RECORDING PLAYBACK  |
| 16. ARTIFICIAL VOICE   | 17. WIRELESS MICROPHONES |                         |

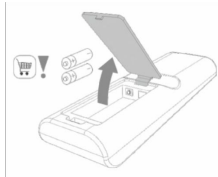 

Note: The remote control can only use all functions when playing MP3 / WMA music from USB or TF card. Equaliser is available only when you play MP3 / WMA music from an TF card / USB drive. Preset modes are: Standard -> Pop -> Rock -> Jazz -> Classic. Numeric buttons can be used to directly enter the song number in playback mode USB / TF, or to enter exact radio frequency in FM mode (eg. by entering 1234 you will set up 123.4 FM). Remote control requires two AAA batteries. (2 pieces 1.5V alkaline AAA batteries). Batteries are not included. After purchase, install batteries in the remote control as shown inside the battery compartment.

### Before first use

After buying the speaker and unpacking, check the package contents. Before using the speaker for the first time, please fully recharge the battery. Leave the main switch in the OFF position. First connect the power adaptor into the socket DC15V on control panel, then plug the other end into a mains outlet. The charge indicator LED will be on (CHARGE). After the battery is fully charged, the charging LED indicator will change status to END. The speaker is now ready for use. The speaker powered by the battery built-in or by external DC 15V.

### Music playback

Playing music from USB memory  
Copy your favorite music in MP3 or WMA format to a USB flash drive with your PC. Files can be in the root directory or folders. To switch between songs or between folders, you can use the buttons on the remote control.  
Playing music from the USB drive will start automatically when you insert the USB drive into the USB connector on the speaker.

If the USB drive has been plugged in and is playing music from other music source (eg. BT, FM radio, etc.) choose USB source with sound source button. Play starts automatically. You can pause and play music by pressing the Play / Pause button.

### Playing music from micro TF card

Copy your favorite music in MP3 or WMA format to the TF card with your PC. Files can be in the root directory or folders. To switch between songs or between folders, you can use the buttons on the remote control.

Playing music from the TF card will start automatically when you insert the TF card into the TF card socket on the speaker.

If the TF card has been plugged in and is playing music from other music source (eg. BT, FM radio, etc.) choose TF source with sound source button. Play starts automatically. You can pause and play music by pressing the Play / Pause button.

### Listen to FM radio

The speaker has an integrated FM tuner. For better radio reception, we recommend using an external FM antenna, especially in areas with poor FM signal reception. On the remote control or the control panel on the speaker, switch the sound source to FM.

If you are in a new location, or you have not yet saved radio stations in the memory, press Play / Pause (FM scan) on the remote control or the control panel of speaker. This will start automatic scan for available FM stations and store them in the memory (memory for 20 stations). You can switch between stored radio stations by pressing button previous / next track (CH - / CH+).

### Playing music from the AUX-IN input

By pressing the Sound source button on the remote control, or the control panel on the speaker, the sound source can be switched to AUX. External music sources can be connected to the AUX-IN socket using an audio cable.

 
### Bluetooth streaming

Using the remote control, or the control panel on the speaker, choose the Bluetooth audio source. The information display will flash blue. The speaker is now ready to be paired with your phone, or tablet.

On your phone / tablet activate Bluetooth mode and search for available devices. From the list of available BT devices, select "1426699". After pairing, you just need to use the music player on your phone / tablet and play the desired track.

### Connecting and using a microphone

The speaker supports connection and use of one wired and two wireless microphones. Wireless microphone (included) requires batteries (2pcs Alkaline 1.5V batteries type AA, not included). Unscrew the lower part of the microphone handle, insert the batteries and screw the cover back. To activate the microphone, set the slider upward to the ON position. If you're near a speaker, it automatically pairs with a microphone, LED indicator of MIC will turn on. The microphone is now ready to be used. Wired microphone (not included), requires connection with the speaker via a cable. Plug the 3-pin connector of the cable into the bottom of the microphone, and the other end of the cable with 6.3mm jack plug into the MIC input. To activate the microphone, change the slide switch to the ON position. All connected microphones (wired and wireless) have shared volume and echo effect controls. These settings are independent from the main volume setting of playing music from other audio sources. Microphones can be used in any mode of music playback.

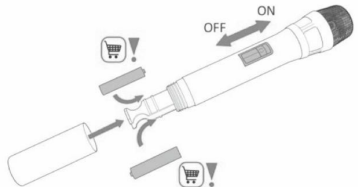

### Guitar connection

The speaker allows you to connect an electric guitar or other musical instrument with preamp output. For input connection, use the GUITAR (6.3 mm jack). This input has volume settings independent from the main volume of music playback.

### Recording

The speaker allows you to record sound in several ways. In order to utilize the audio recording, it is necessary to have connected a USB flash drive or micro TF card to the speaker. Note, there must be at least one MP3 track already stored in the root directory

What will be recorded	Active sound source				
	Bluetooth	FM radio	AUX-IN	micro TF card	USB flash disk
	N/A	Sound from FM radio	Sound from AUX-IN	Sound from connected devices to MIC and GUITAR + wireless MIC	Sound from connected devices to MIC and GUITAR + wireless MIC

Before activating the record function, please make sure that there is at least one wired, or wireless, microphone connected. To activate the recording function, momentarily press the Record button on remote control. The display will show the elapsed recording time. To stop recording, briefly press the Record button on the remote control. The speaker will automatically play the last track recorded. Please note that the output from the MP3 player is lower than from the microphone directly. Please adjust the Mic and master volume control accordingly. When the speaker is playing back a recording, the recording can be deleted by pressing and holding the "REC" button for three seconds. To play music files stored on the TF/USB memory, double press the "REC" button.

**Note:** Deleted recordings cannot be restored. Therefore, please be careful when deleting any files, so as not to delete any files that you want to keep. These recordings are in a special folder created by the speaker's integrated MP3 player. All other MP3/ WMA files stored in the root directory, or in other folders, cannot be deleted this way.

Problem	Causes	Solutions
No display	1. Power plug not properly plugged in 2. Power socket is broken	1. Reinsert power plug 2. Check the power cord and socket
No sound	1. Incorrect speaker connection 2. Wrong input mode selected 3. Volume at lowest level	1. Check speaker connection 2. Choose the right input 3. Increase master volume
Sound distortion	1. Master volume is set too high. 2. The Speaker is damaged	1. Decrease master volume 2. Check/replace the speaker

### Warranty

All products are covered by the standard warranty in accordance with the applicable EU law. Please contact Hope Education.  
**Note:** For security reasons, do not remove any of the covers or attempt to gain access to the inside of the product. Do not attempt to remove screws or open the cover of the product. For any product service and repairs always contact an authorized service centre or a qualified person. Failure to comply with these conditions may cause injury, or damage to the device. This product is not intended for professional use. For more information about the warranty and support, please contact Hope Education.

## Additional information



This product complies with the radio interference requirements of the European community.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products within your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



To prevent possible hearing damage, do not listen at high volume levels for long time periods.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

**HOPE**  
is all you need



Made In China  
Findel Education Ltd, 2 Gregory Street, Hyde, SK14 4HR, UK Tel:0845 120 4521  
Findel Education Ltd, Suite 524 21 Botanic Avenue, Belfast, BT7 1JJ, NI