

 
Climbing House FCH11



IMPORTANT

PLEASE READ THIS INFORMATION BEFORE CONTINUING

- The activity centre must be assembled by an adult.
- The activity centre is designed for indoor use on a flat surface.
- The activity centre must be positioned to allow a minimum of 1.5 metres of free/clear space around the perimeter of the activity centre.
- Please note that any natural materials (e.g. ply wood) may vary in colour / finish.
- Conforms to BS EN1176-1:2008

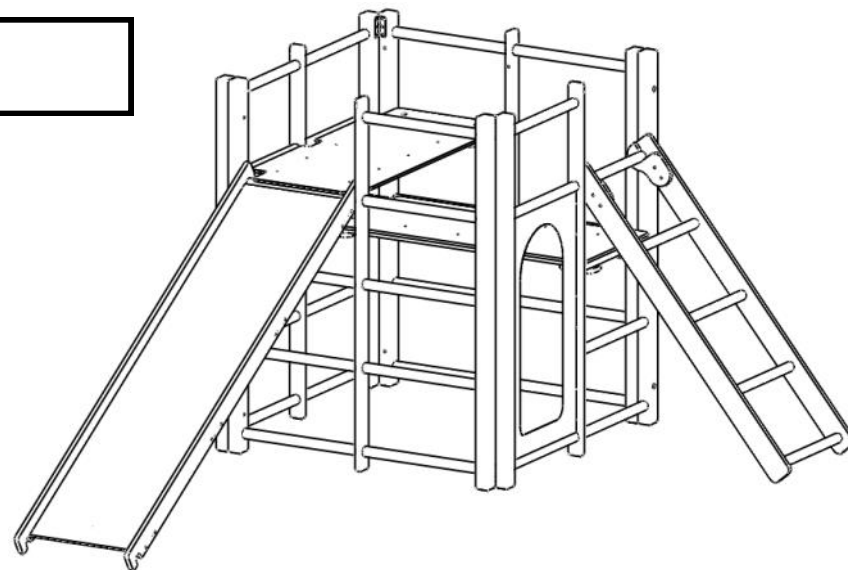

SAFETY INSPECTIONS & MAINTENANCE

- Make a routine visual inspection daily before use.
- Check screws & bolts to be sure they remain tight.
- Periodically inspect for cracks, breaks, loose parts, missing parts, and/or malfunctions.
- Remove the product from service when any condition develops which might make operation unsafe.
- Every 1 to 3 months manually check that all connections are tight and all components are functioning.
- Every year perform a thorough safety inspection of all components.
- If equipment is subject to heavy use increase inspection and maintenance as appropriate.
- Use only replacement parts supplied by Findel Education

WARNING!


WARNING! CHOCKING HAZARD. Although when assembled this product is suitable for the intended age range, during assembly small parts and/or parts that have functional sharp edges may be present. Until fully assembled keep away from children under 3 years of age.

CAUTION! ADULT SUPERVISION REQUIRED. This product is intended for children of a specific age or above. A responsible adult should supervise the play area so that children younger than the intended age range do not interact with this product and ensure the product is not misused.


CLEANING

Clean the surface using a slightly damp cloth and if necessary soapy water. Do not use any cleaning product containing alcohol, bleach or other abrasives. These will dull any shiny surfaces on the product. Furniture polish will also work to clean and dust off the surface. We recommend that you test all cleaning materials on the underside of any surface that would not be seen during normal use of the product.


Box Contents

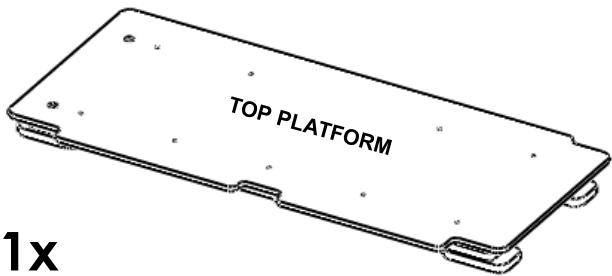


1x
Top Platform

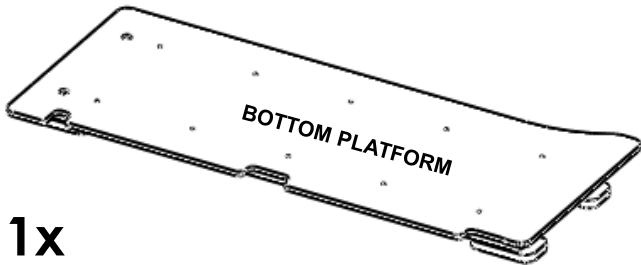

1x
Bottom Platform

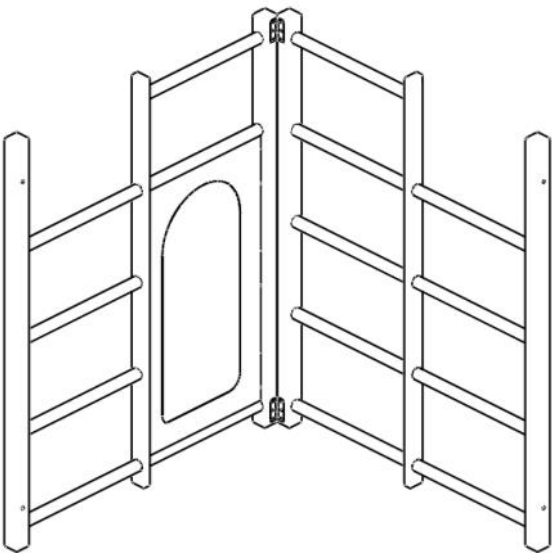 

1x
Frame A

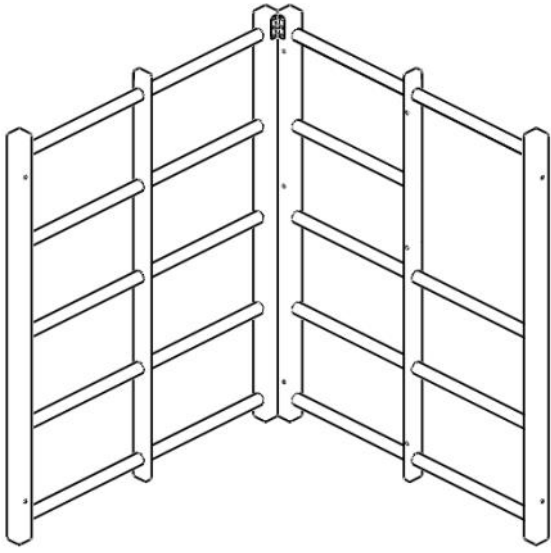 

1x
Frame B



1x
4mm Allen Key

 


4x
80mm Brass Hex. Head Bolt (83)



4x
50mm Brass Hex. Head Bolt (80)

1

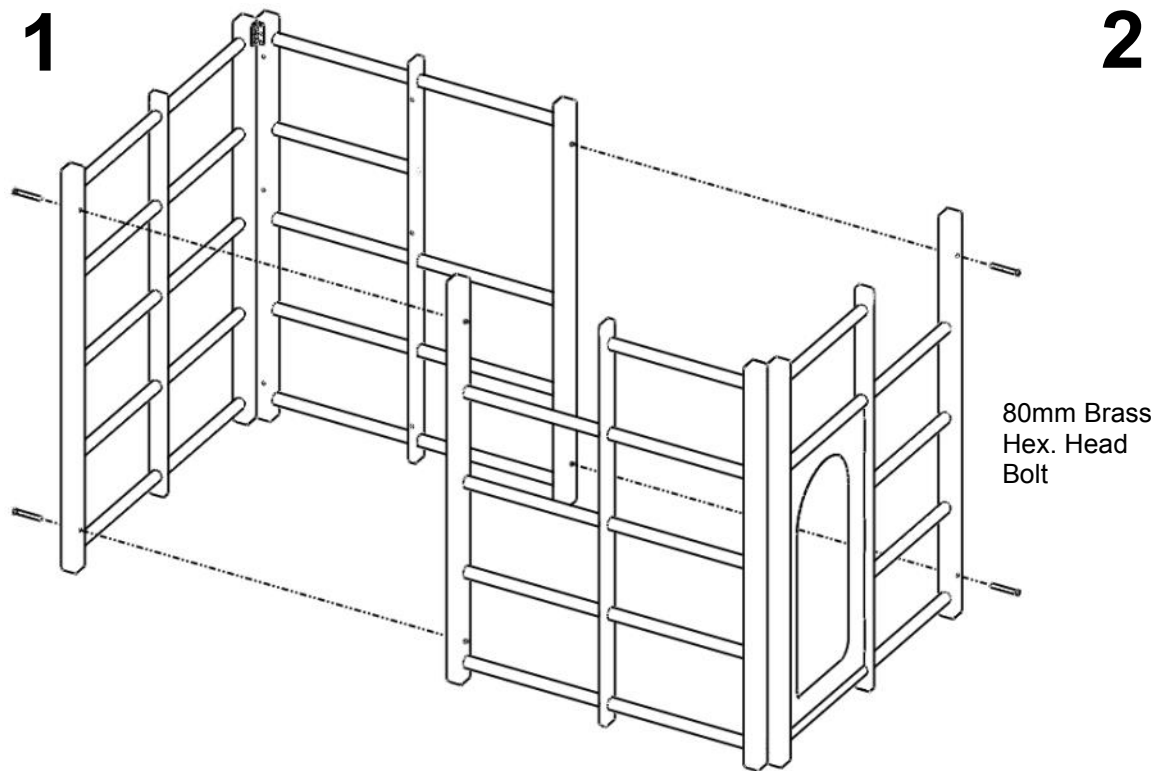


2


WARNING ! Securing the Platforms

The Platforms must be used when the frame is in use.
The Platforms must always be connected to the frame in the position shown.

Failure to use and position in this way is in violation of the European safety standards (EN1176) and could result in the child being injured.

  WARNING !
THIS LOCATION ONLY

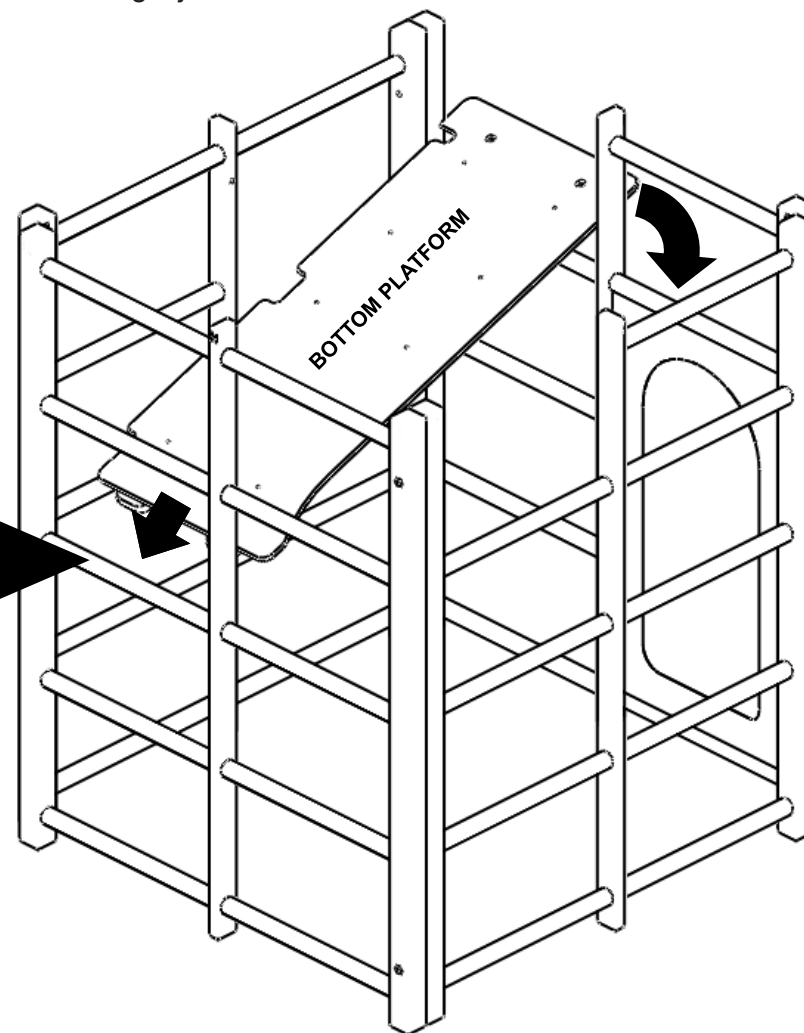


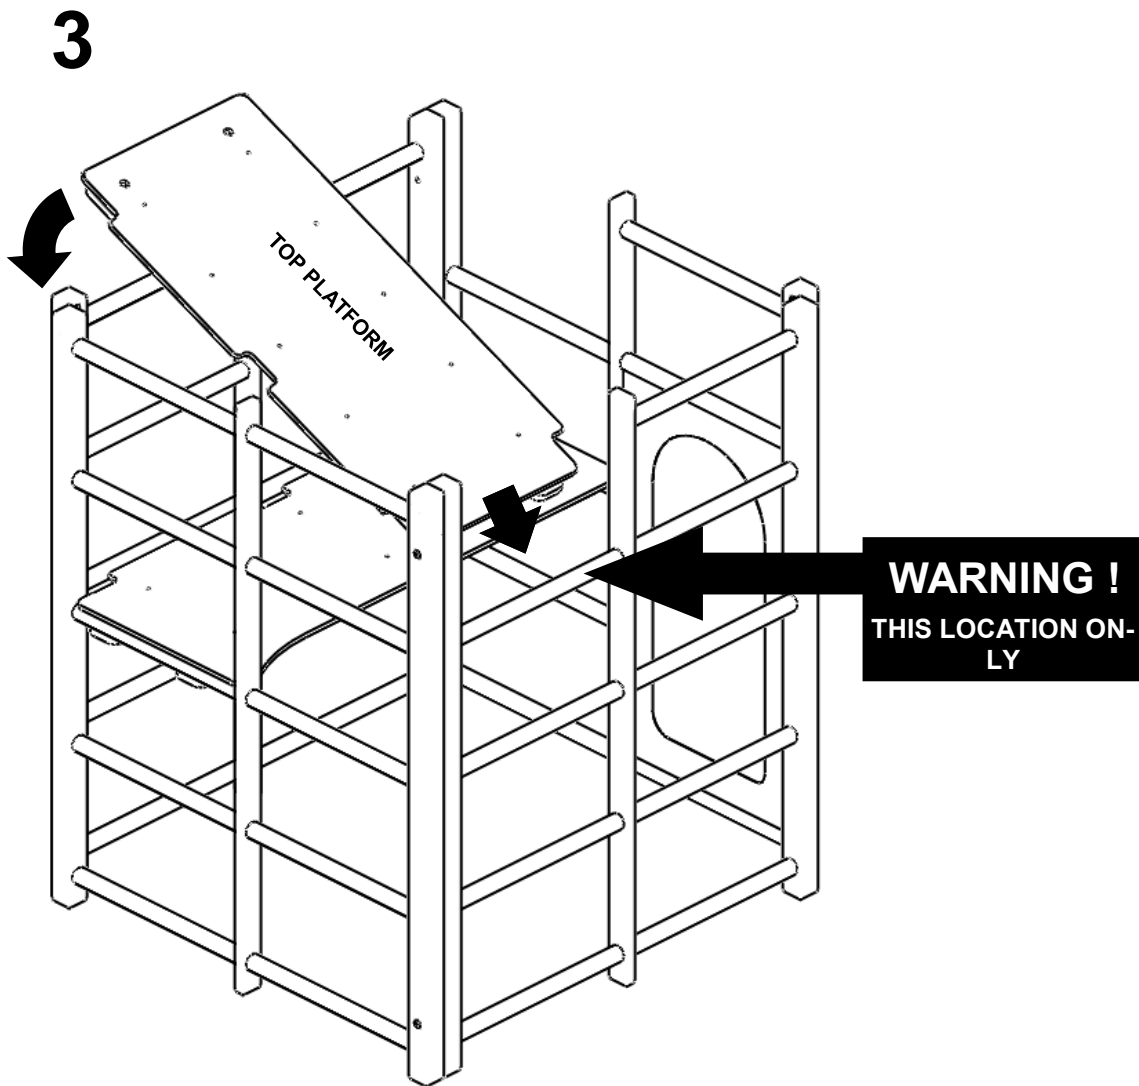

WARNING ! Securing the Platforms

The Platforms must be used when the frame is in use.
The Platforms must always be connected to the frame in the position shown.


 
Failure to use and position in this way is in violation of the European safety standards (EN1176) and could result in a child being injured.

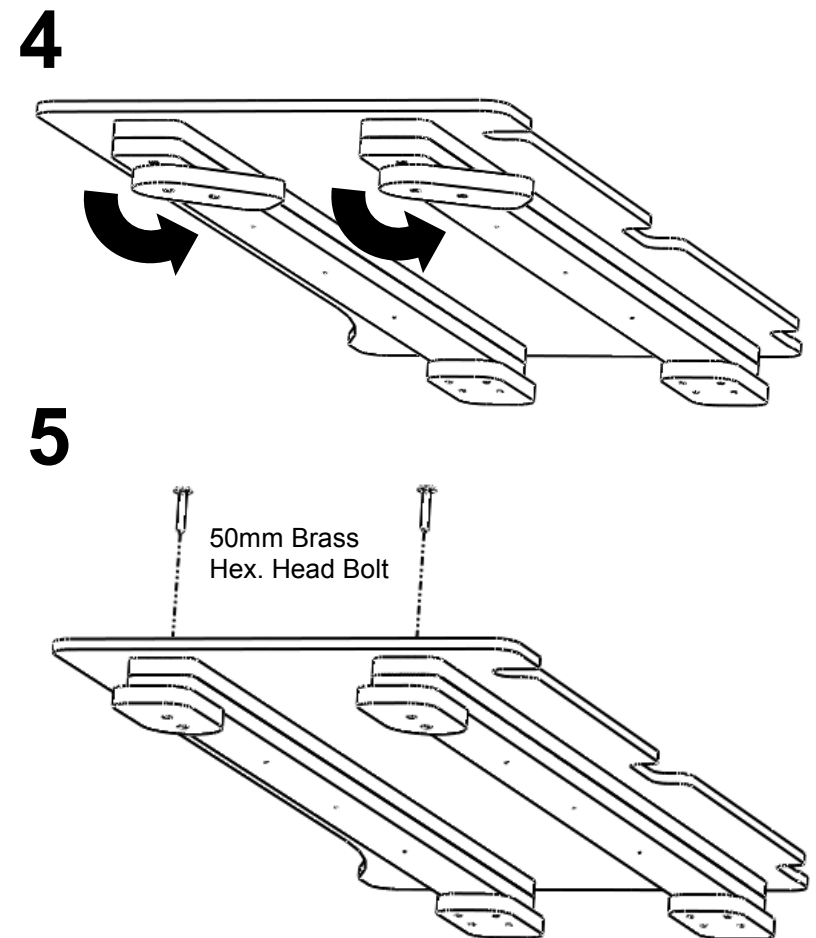

WARNING ! Securing the Platforms

The Platforms must be secured to the frame as illustrated in steps 4 & 5

  Failure to secure using the supplied bolt is in violation of the European safety standards (EN1176) and could result in a child being injured.

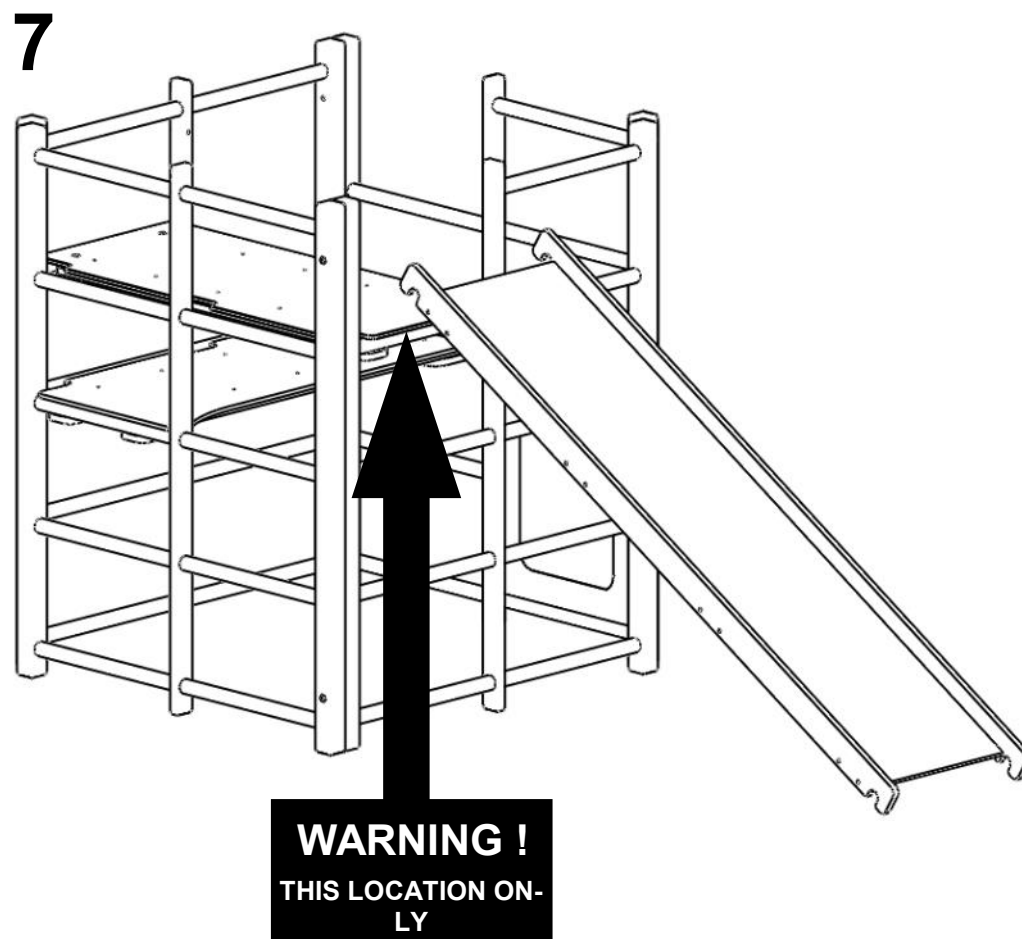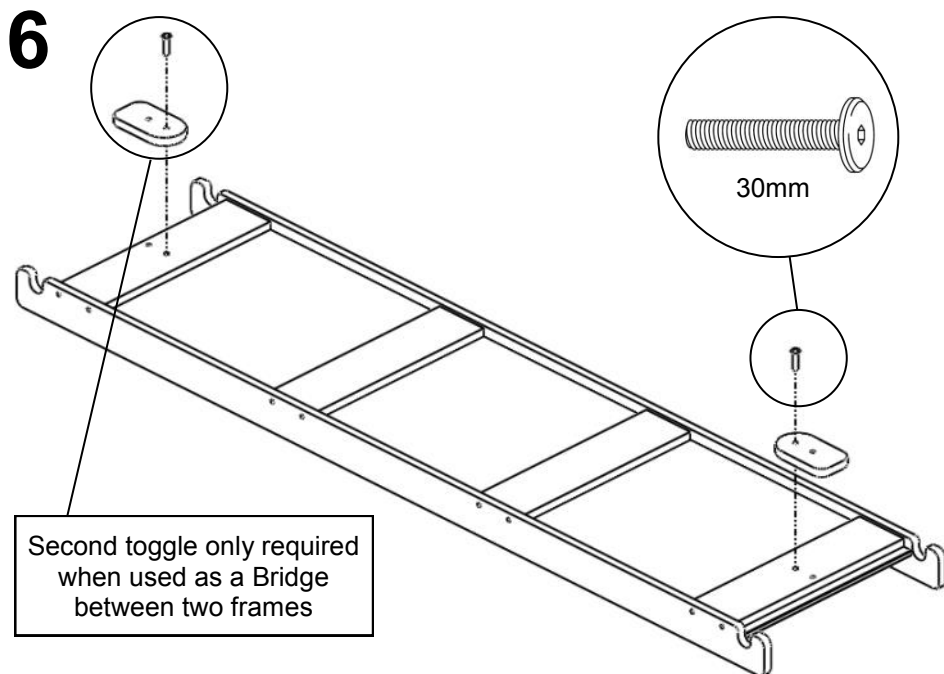


WARNING ! Securing the Slide


A Slide must always be connected to the frame when the frame is in use. The Slide must only be secured to the frame in the position shown.

Failure to use and position in this way is in violation of the European safety standards (EN1176) and could result in a child being injured.

 8

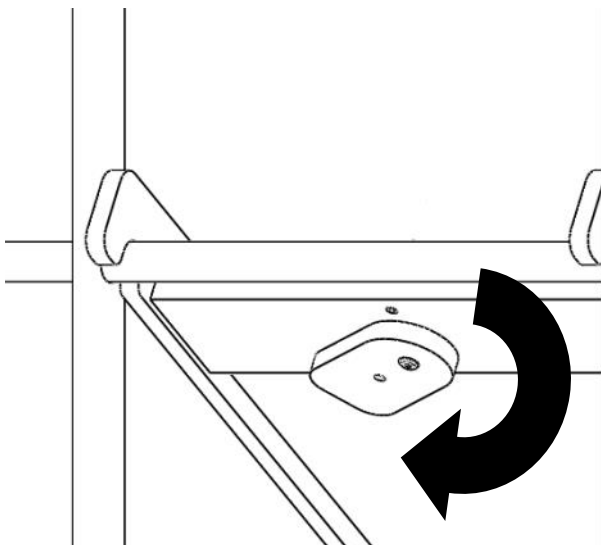

9

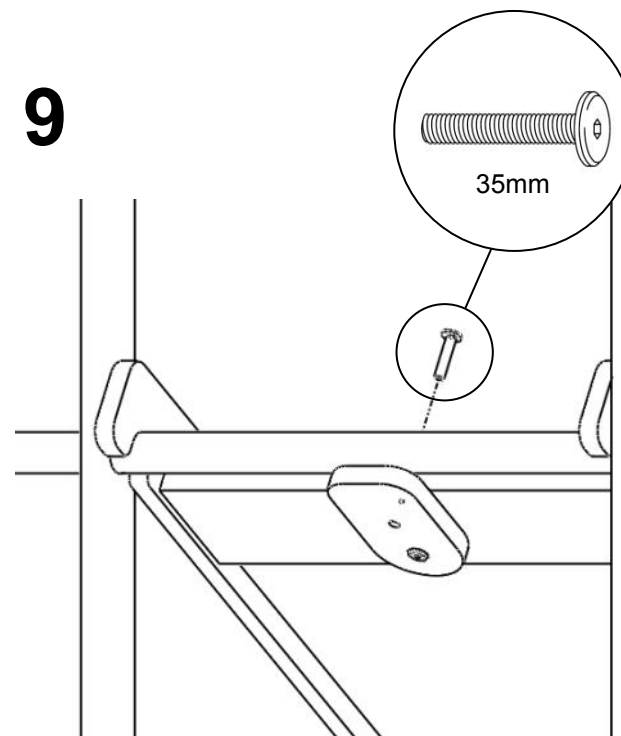 


WARNING ! Securing the Slide

The Slide must be secured to the frame as illustrated in steps 3 and 4. This can be achieved with or without the platforms in place.

Failure to secure using the supplied bolt is in violation of the European safety standards (EN1176)

 10

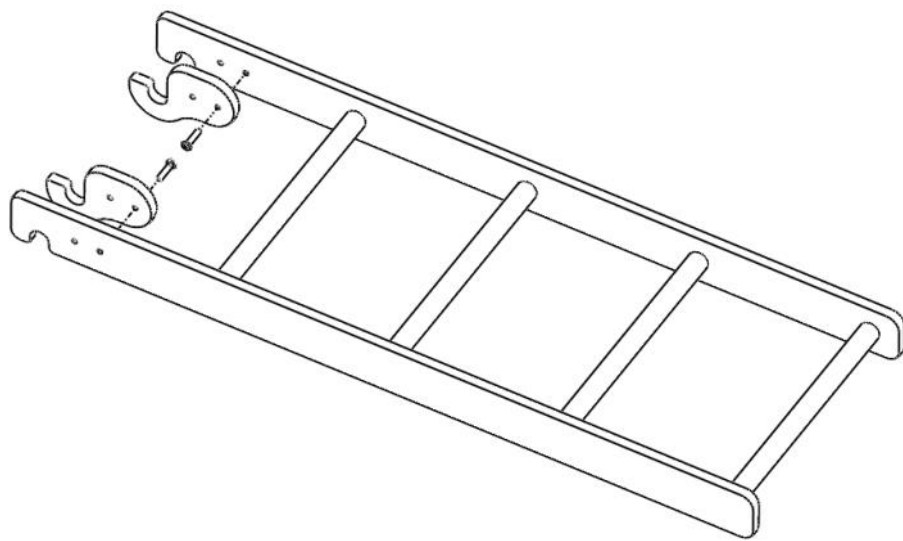


11

WARNING ! Securing the Platforms

The Ladder must always be connected to the frame when the frame is in use.
The Ladder must only be secured to the frame in the position shown.

 Failure to use and position in this way is in violation of the European safety standards (EN1176) and could result in a child being injured.

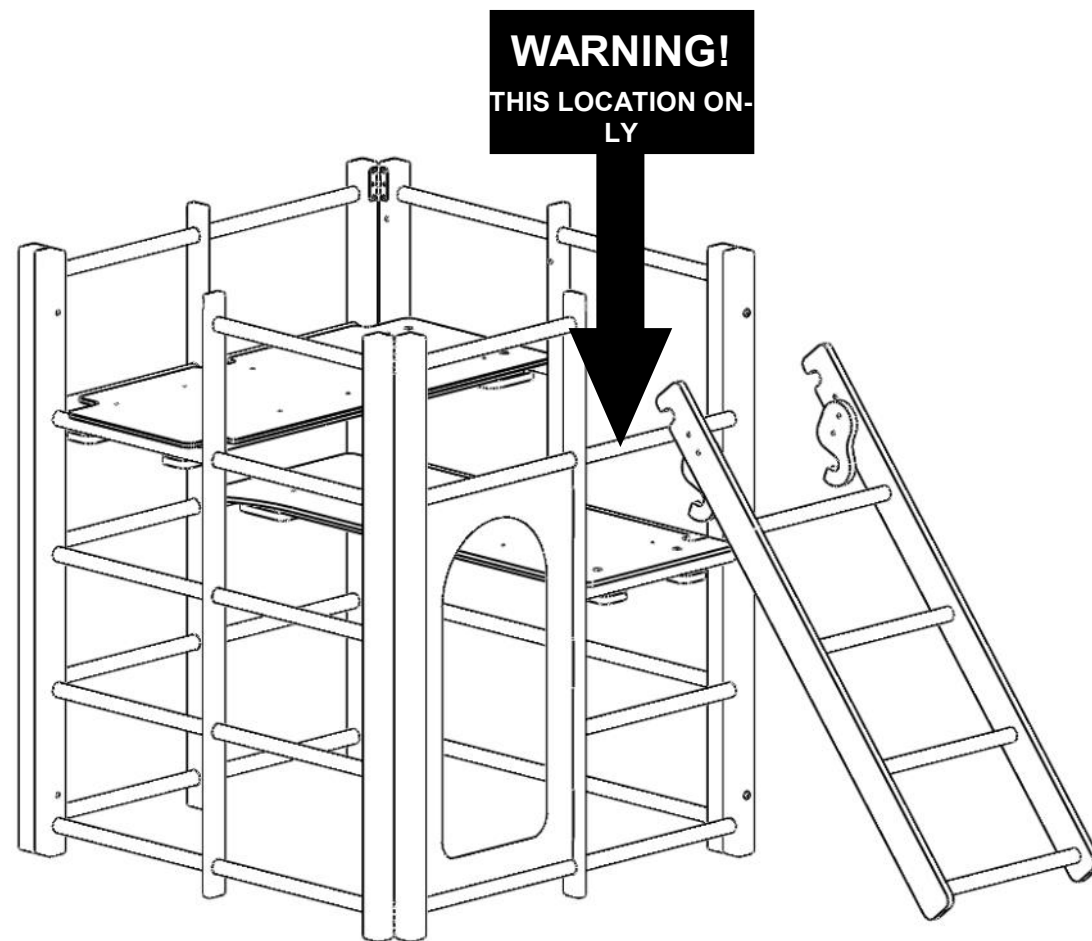


12

WARNING ! Securing the Ladder

The Ladder must be secured to the frame as illustrated in steps 3.


 
Failure to secure using the supplied bolt is in violation of the European safety standards (EN1176) and could result in the slide detaching in use.

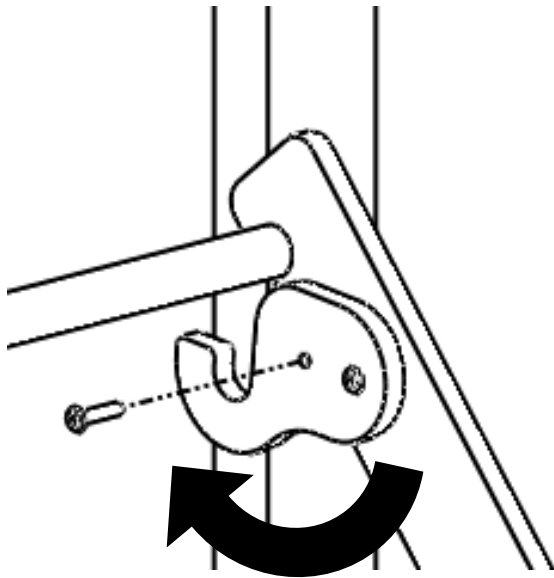


WARNING ! Attaching multiple Accessories

Only 1 accessory (ex. Climbing wall) can be attached to any one side of a frame.

  Failure to do this is in violation of the European safety standards (EN1176) and could result in a child being trapped and/or injured

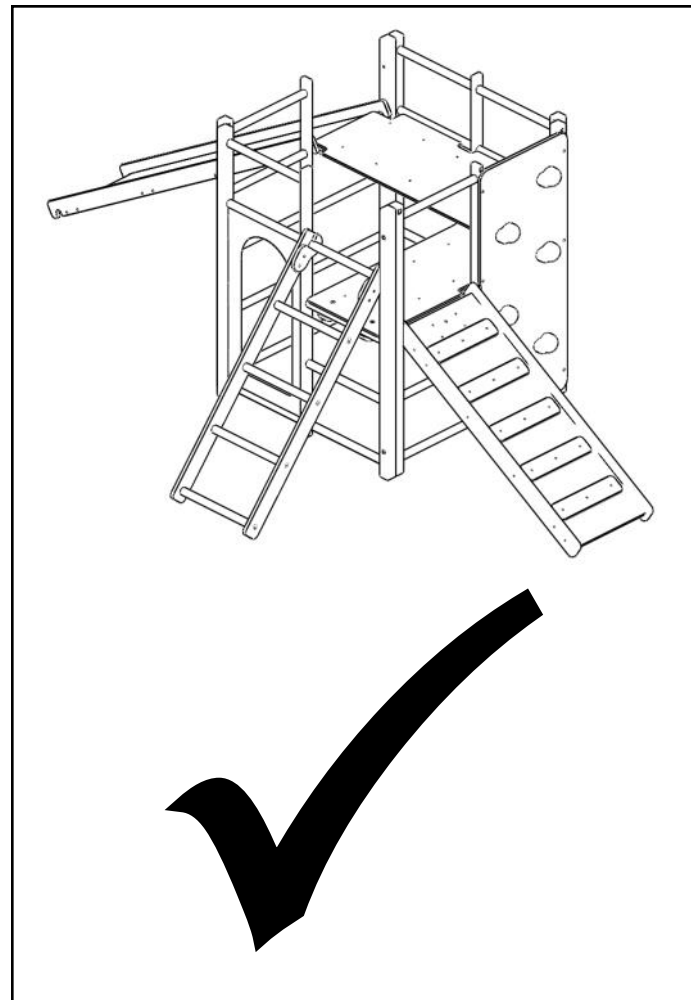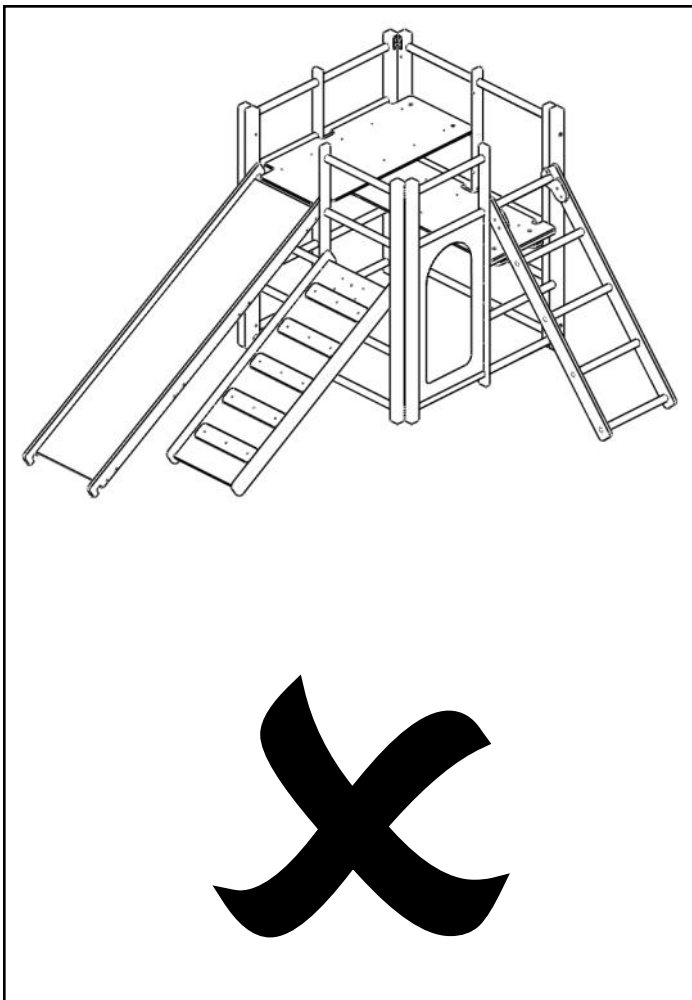

Recommended Configuration 1

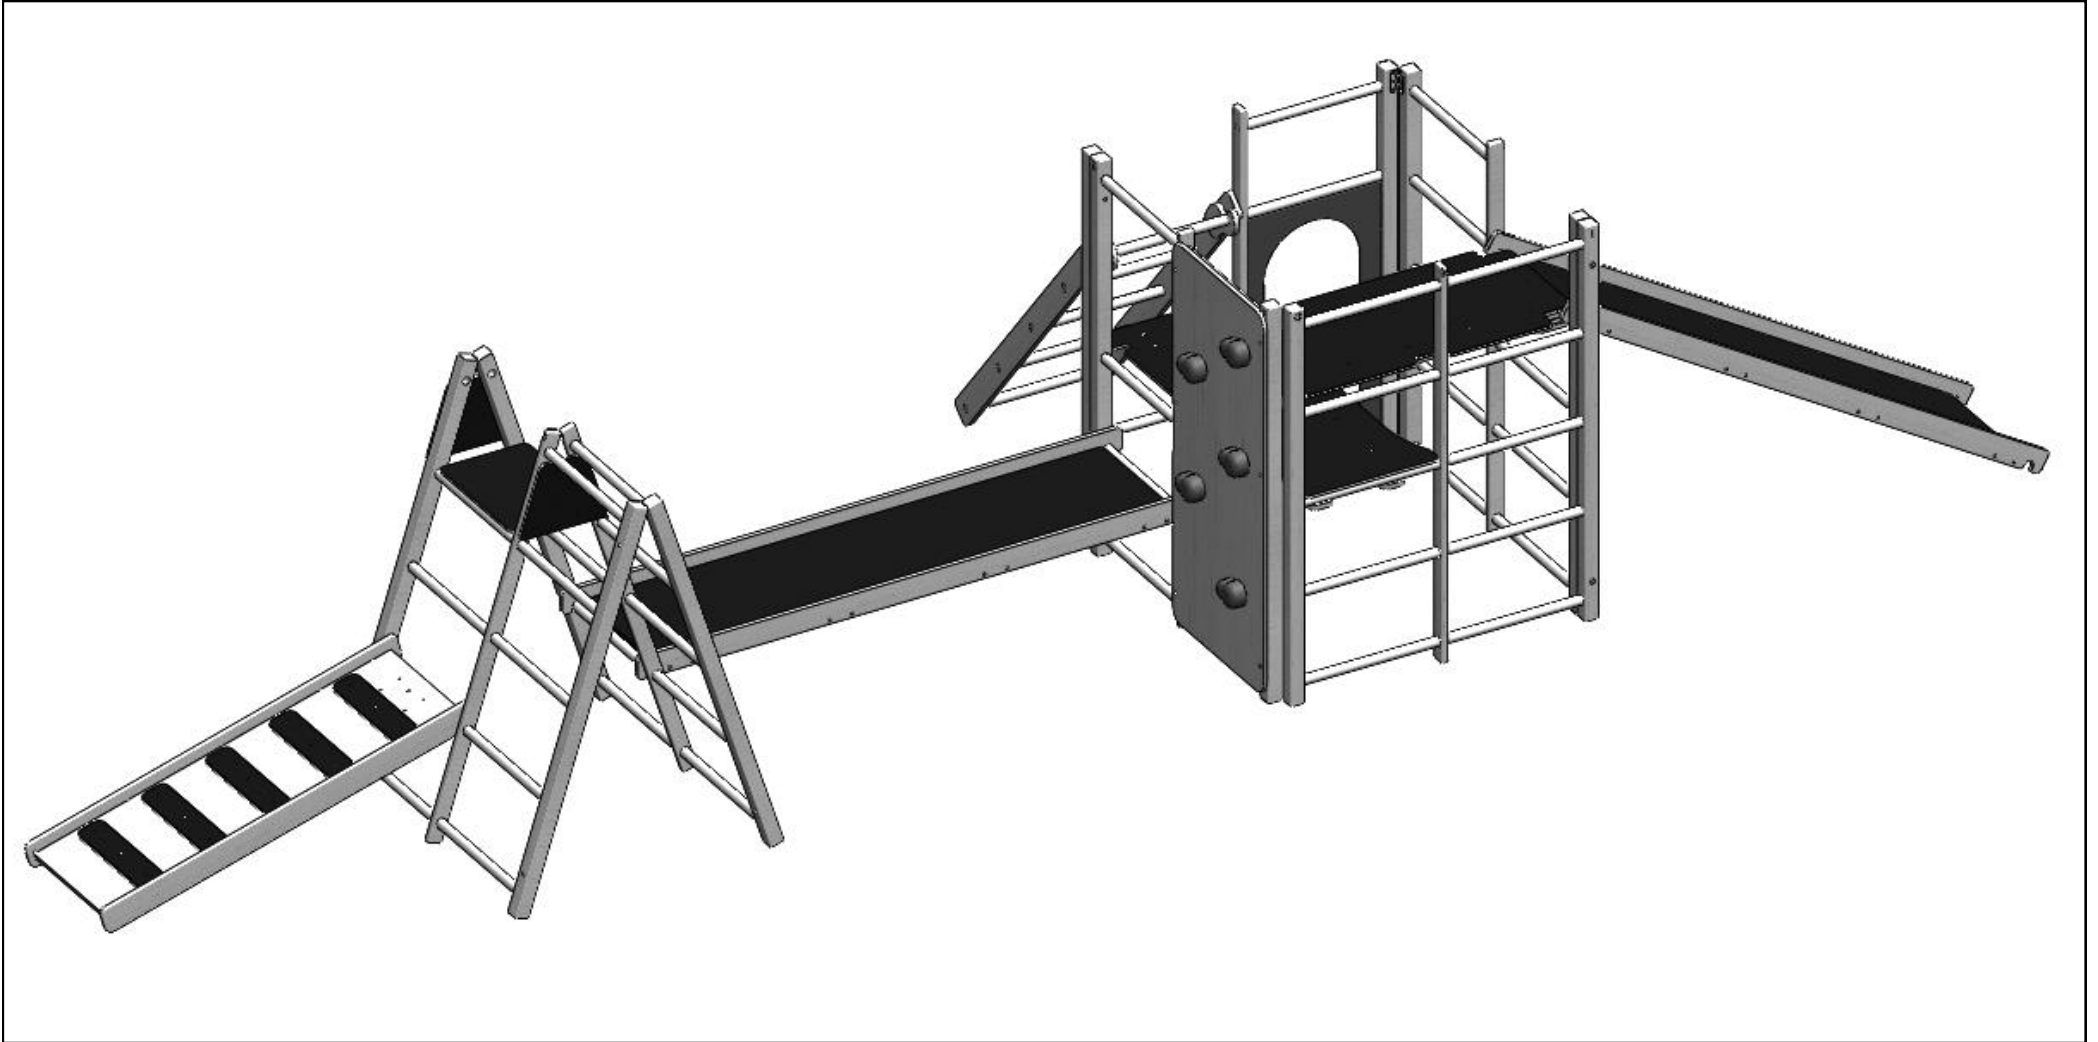 

Recommended Configuration 2

