



DISHWASHER TABLETS
**POWER
ESSENTIAL**











FOR EVERYDAY CLEAN



Finish Power Essential, your All in 1 solution for your dishes.
Our powerball supercharges the tablet for everyday clean
1st time, every time.



 Save water No pre-rinse	 Clean dish	 Shiny glass	 Eco cycle
 1st time tough stain removal	 Glass protect	 Protects silverware	 Protects dish decor

							
	✓	✓	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓		
	✓	✓	✓	✓			

DESIGNED FOR

All Dishwashers
Perfect for Office Kitchenettes



INGREDIENTS

5-<15% oxygen-based bleaching agents, 5-<15% polycarboxylates, <5% non-ionic surfactants, <5% phosphonates. Contains enzymes (Subtilisin, Amylase). Contains perfume.

DOSAGE | 1 tab per wash

INFORMATION

SKU Code	Tabs	Variant
3205612	15	Lemon
3205609	15	Regular
3074466	42	Regular
3204785	50	Regular
3205256	70	Regular
3204783	100	Lemon
3204606	100	Regular

COMPLETE YOUR DISHWASHING EXPERIENCE

1.  RINSE AID For drying & spot prevention.	2.  DEEP CLEANER Hygienically cleans grease & limescale.	3.  SALT Protection from limescale residue.	4.  CARE TABS Degreasing & cleaning boost.	5.  PROTECTOR Protection from glass corrosion.
---	--	--	--	--

Causes serious eye irritation. Keep out of reach of children. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: get medical attention. If medical advice is needed, have product container or label at hand. Do not ingest. If product is ingested then seek medical advice.