


# JIGSAW TACTILE PANEL



Specification,  
Installation &  
Care Manual

# CONTENTS



PACKAGE OVERVIEW

...Page 3

DIMENSIONS

...Page 4 & 5

INSTALLATION

...Page 6

CARE

...Page 7

JIGSAW

TACTILE PANEL

# PACKAGE OVERVIEW



1. Tactile Panel Assembly
2. Fixing Kit :
  - 30mm Screws (x2)
  - 6mm Wall Plugs (x2)
  - 70mm Screw (x2)
  - 7mm Wall Plug (x2)
  - Screw Cap (x2)

JIGSAW  
TACTILE PANEL

# DIMENSIONS




Front

Height = 900mm

Width = 900mm

Depth = 33mm

**JIGSAW**  
TACTILE PANEL



 
900mm

Back


Weight = 15 KG

**JIGSAW**  
TACTILE PANEL

# INSTALLATION

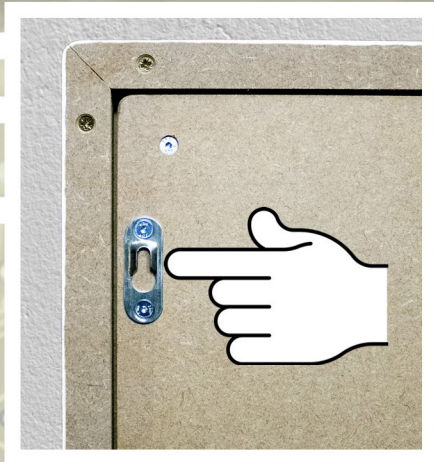

 
- Locate the hanging brackets on the back of the Tactile Panel Assembly.
- Drill holes in wall 830mm apart and insert 6mm wall plugs.
- Insert 30mm screws into the wall plugs and hang panel.
- Mark drill points through the fixing holes in the bottom corners of the panel.

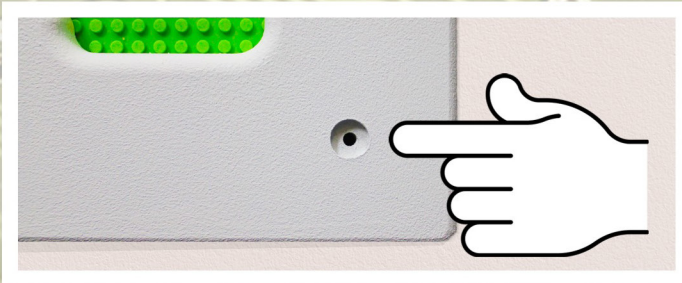

- Remove panel and drill the marked points. Then insert the 7mm wall plugs.
- Re-hang panel and insert the 70mm screws, along with the screw caps, into the fixing holes.
- Press screw caps closed when finished.

**JIGSAW**  
TACTILE PANEL

# CARE

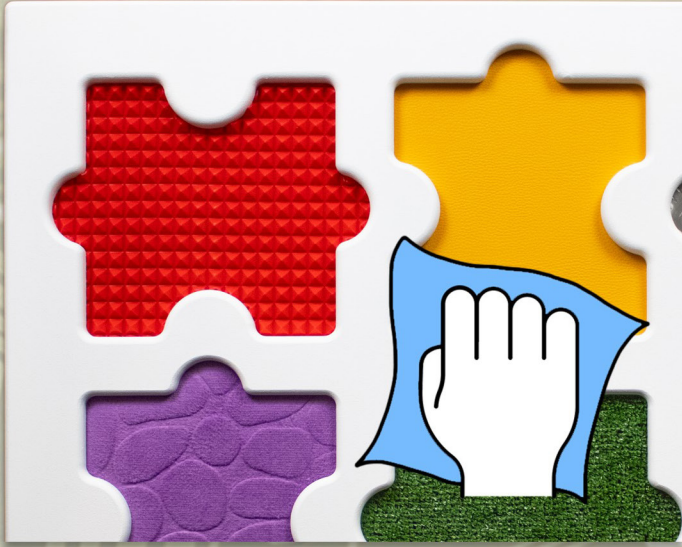

If cleaning the product becomes necessary, use only a soft damp cloth.

Do NOT use harsh chemicals or abrasives.

JIGSAW  
TACTILE PANEL



**JIGSAW**  
TACTILE PANEL