



Technical Specification	
Manufacturer	Status International (UK) Ltd.
Address	Status International (UK) Limited. Unit 1, Whitehall 26 Business Park, Heathfield Lane, Birkenshaw, BD11 2HW
Product	Black Electric Oven with Dual Hot Plates
Product Code	AMARILLO1PKB
Wattage (Oven)	1400w
Wattage (Hotplates)	600w Each
Voltage Input	220 – 240V
Frequency	50-60Hz
Capacity	25 Litres
Temp Control	Up to 230°C
Timer Type	60 Minute Mechanical
Heating Element Settings	4
Trays/Shelf	1 x Aluminium Tray, 1 x Wire Rack with Handle
Hotplate Settings	4
Interior Coating Material	Zinc
Dimensions	483mm x 386mm x 303mm
Weight	10kg (Approx.)

Important Safety Information

- Do not touch hot surfaces. Always use handles or knobs.
- Close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.



Registered Office: Status International (UK) Limited.

Unit 1, Whitehall 26 Business Park, Heathfield Lane, Birkenshaw, BD11 2HW

- The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
- Do not place on or near a hot gas or electric burner.
- When operating the oven, keep at least four inches of free space on all sides of the oven to allow for adequate air circulation.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
- To disconnect, turn the time control to OFF, then remove the plug. Always hold the plug, and never pull the cord.
- Extreme caution must be used when moving a drip pan containing hot oil or other hot liquids.
- Do not cover crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
- Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
- Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Over sized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric risk.
- A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.
- Be sure that nothing touches the top or bottom elements of the oven.
- Do not place any of the following materials in the oven: cardboard, plastic, paper , or anything similar.
- Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
- This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around edges. Avoid scratching door surface or nicking edges.
- This appliance is OFF when the Timer Control button is in the "OFF" position.
- Do not use outdoors.
- Do not use appliance for other than intended use.