

Apollo Creative

Interactive Light & Sound

Interactive Remote Control User Guide

This guide has been written to help you get the most from your Interactive Remote Control. Please ensure that you read this fully as it contains important information on setting up your Remote Control. Failure to follow this advice may result in damage to the controller and invalidate your warranty.

Keep this guide in a safe place for future reference.



Setting Up

1. Ensure that the packaging is carefully removed from around the Remote control. Keep the packaging in case the items need to be returned.
2. If you find any damage when you unpack the Remote controller you should report it within **7 days** to your supplier.
3. The Remote controller will arrive charged so that you can use it straight away.
4. Press the coloured buttons to select the colour on the Interactive Sensory equipment. For example, when pressing the red button the item will turn to the colour red.
5. To mix colour combinations on the Interactive sensory equipment Press more than one button at a time and hold.
6. Pressing the white button will turn any LED Lighting to on and off, and will control the bubbles on a bubble tube.
7. The five sockets on the side allow you to use standard assistive technology switches instead of the buttons on the top. (sold separately).
8. To turn the unit off, press the button underneath the Remote Controller. This helps to save the power in between charging.
9. When the battery is low, the Remote control will not function, but the buttons may still light. Ensure that the remote control is Turned off before charging.
10. Please note the batteries are sent with around 30% charge, the items are not fully charged when you receive.

Charging

1. Before commencing with charging, ensure the remote controller power button underneath is switched to off.
2. Ensure you have the correct battery charger which is supplied with your Remote controller. Part No : 1832656, 7.2vDC.
3. Plug in the supplied battery charger into the mains socket first, making sure the mains is then switched on after being plugged into the wall.
4. Then plug the connector end into the remote controller. You will notice the charger will initially stay yellow for standby.
5. Wait a few minutes, then it will flash yellow for (Pre-charge) the light will then change to flashing green (Rapid Charge).
6. Once the green flashing light starts to slow and flash slowly, this means the unit is fully charged. Turn off the charger at the wall and disconnect.
7. If the battery charge is very low, the LED may remain on. In this instance, disconnect the charger and reconnect.
8. Charge time is approximately 4 hours. The Remote control will not operate with the charger still attached.
9. To utilise the battery life between each charging session, we recommend that the Remote Control is turned off between uses.
10. Please note the remote will not work whilst the unit is on charge.
11. When using the battery powered version, batteries are only to be charged by adults or children at least 8 years old.
12. **WARNING:** For the purposes of recharging the battery, only use the detachable battery charger provided with this appliance.
13. **WARNING:** This appliance contains batteries that are only replaceable by skilled persons.

Potential risks & warnings

1. Read and understand all these instructions before using the Remote Control.
3. Do not operate the battery charger with a damaged power cord, or if it has been dropped or damaged.
4. Position the battery charger so that it will not be tripped over, pulled or come into contact with hot surfaces.
5. Always connect the battery charger to a grounded outlet.
6. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
7. Do not dismantle the Remote Control, contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.
8. Always unplug the unit from the power socket before cleaning, servicing and when not in use. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
9. This developmental aid appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or Instruction concerning use of the developmental aid appliance in a safe way and understand the hazards involved.
10. Children below this age must be supervised when using this developmental aid appliance. Cleaning and user maintenance shall not be made by children.
11. If repairs are not completed by Apollo Creative this will void warranty and we will not be held liable for any damage or injury caused.

This Remote Control is supplied by:



We are a member of the WEEE
Compliance scheme

Registration : **WEE / MM4751AA**

Manufactured by:

Apollo Creative
Merlin House
Low Moor Lane
Knaresborough
North Yorkshire
HG5 9JB

T: 01423 798232

E: sales@apollocreative.co.uk

W: www.apollocreative.co.uk

