



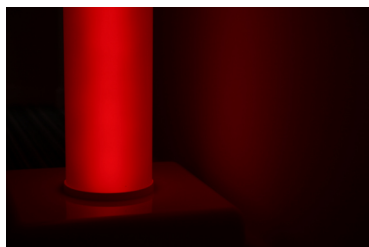

# Chroma Tube User Guide

---

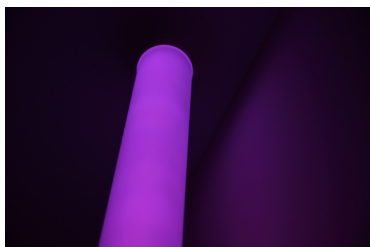

This guide has been written to help you get the most from your chroma tube. Please ensure that you read this fully as it contains important information your tube. Failure to follow this advice may result in damage to the tube and invalidate your warranty.

**Keep this guide in a safe place for future reference.**

# Contents

---

Unpacking	3
Potential risks & warnings	4
Contact details	5

# Unpacking

---

1. Chroma tubes are shipped in specialist packaging, designed to protect the tube from damage during transport.
2. Ensure that the packaging is carefully removed from around the tube. Keep the packaging in case the tube needs to be returned.
3. Take care not to lift by the tube as this can cause damage. Always lift from the base.
4. The power supply (**12V DC 2.0A**) for the tube is stored within the supplied plastic lid, found taped to the base of the tube. This power supply is around 1.5M in length.
5. Ensure that the power supply is sited at an adequate distance from the tube and that there is no tension in the power cable. The cable should never be coiled around the power supply,
6. Carefully lift white base when putting on/taking off up the tube as this can cause scratches to the outer tube.
7. Large enclosures such as Tubes and Panels are to be secured against falling by use of wall mounting brackets, mounting enclosure into fabricated plinths or similar supports. (**Sold separately**).
8. **Do not** remove the protective film from the tube until the unit is running to your satisfaction. If removed this will void warranty.
9. If you find any damage when you unpack you should report it within **7 days** to your supplier.
10. If repairs are not completed by Apollo Creative this will void warranty and we will not held liable for any damage or injury caused.
11. In the unlikely event of the tube not working fully, please contact your supplier within **7 days** of receiving the tube.

# Potential risks & warnings

---

1. Read and understand all these instructions before using the Chroma tube.
2. Do not operate the tube with a damaged power cord, or if the unit has been dropped or damaged.
3. Position the power cord so that it will not be tripped over, pulled or come into contact with hot surfaces.
4. Always unplug the tube from the power socket before cleaning, servicing and when not in use. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
5. Always connect the chroma tube to a grounded outlet.
6. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
7. Do not dismantle the tube, but contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.
8. This developmental aid appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the developmental aid appliance in a safe way and understand the hazards involved.
9. Children below this age must be supervised when using this developmental aid appliance. Cleaning and user maintenance shall not be made by children.
10. **Warning:** Only use the detachable supply unit **(12V DC 2.0A)** provided with this appliance

This Chroma Tube is supplied by:



We are a member of the WEEE  
Compliance scheme

Registration : **WEE / MM4751AA**

Manufactured by:

Apollo Creative  
Merlin House  
Low Moor Lane  
Knaresborough  
North Yorkshire  
HG5 9JB

**T:** 01423 798232

**E:** [sales@apollocreative.co.uk](mailto:sales@apollocreative.co.uk)

**W:** [www.apollocreative.co.uk](http://www.apollocreative.co.uk)

