



Disco Tube User Guide

This guide has been written to help you get the most from your Disco Tube. Please ensure that you read this fully as it contains important information on setting up your tube. Failure to follow this advice may result in damage to the Disco Tube and invalidate your warranty.

Keep this guide in a safe place for future reference.



Unpacking

1. Disco tubes are shipped in specialist packaging, designed to protect the tube from damage during transport.
2. Ensure that the packaging is carefully removed from around the tube. Keep the packaging in case the tube needs to be returned.
3. Take care not to lift by the tube as this can cause damage. Always lift from the base.
4. The power supply (**12V DC 1.5A**) for the tube is stored in the top cardboard packing piece. This power lead is around 1.5M in length. You will also find the Disco tube lid packed at the base.
5. **Do not** remove the protective film from the tube until the unit is running to your satisfaction.
6. Carefully lift white base when putting on/taking off up the tube as this can cause scratches to the outer tube.
7. Any extras that have been ordered alongside the tube will be found within the bottom of base.
8. If you find any damage when you unpack you should report it within **7 days** to your supplier.

If repairs are not completed by Apollo Creative this will void warranty and we will not be held liable for any damage or injury caused.

Setting up

1. Ensure that the power supply is sited at an adequate distance from the tube and that there is no tension in the power cable.
2. The cable should never be coiled around the power supply, as this may cause it to overheat.
3. You will need to connect the two white leads from the outer mode switch found on the side of the white base cover into the connector lead coming from the unit. This will complete the set up of your tube.
4. There are two modes of lighting effects for the disco tube. Press the white button on the side of the white base cover to the preferred lighting effect.
5. To activate the tube create noises such as clapping, stomping or playing music.
6. If you are installing the Disco Tube into a padded plinth please discuss with us prior as this can affect the microphone response.
7. Large enclosures such as Tubes and Panels are to be secured against falling by use of wall mounting brackets, mounting enclosure into fabricated plinths or similar supports. (**Sold separately**).
8. In the unlikely event of the tube not working fully, please contact your supplier within **7 days** of receiving the tube.

Potential risks & warnings

1. Read and understand all these instructions before using the Disco tube.
2. Do not operate the tube with a damaged power cord, or if the unit has been dropped or damaged.
3. Position the power cord so that it will not be tripped over, pulled or come into contact with hot surfaces.
4. Always unplug the tube from the power socket before cleaning, servicing and when not in use. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
5. Always connect the Disco tube to a grounded outlet.
6. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
7. Do not dismantle the tube, but contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.
8. This developmental aid appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the developmental aid appliance in a safe way and understand the hazards involved.
9. Children below this age must be supervised when using this developmental aid appliance. Cleaning and user maintenance shall not be made by children.
10. **Warning:** Only use the detachable supply unit provided **(12V DC 1.5A)** with this appliance.

This Disco Tube is supplied by:



**UK
CA**



We are a member of the WEEE
Compliance scheme

Registration : **WEE / MM4751AA**

Manufactured by:

Apollo Creative
Merlin House
Low Moor Lane
Knaresborough
North Yorkshire
HG5 9JB

T: 01423 798232

E: sales@apollocreative.co.uk

W: www.apollocreative.co.uk

