



Assembly Instructions  
10000703  
Modular Planter Assembly

- 1** Arrange the wooden pieces to form the planter around the membrane

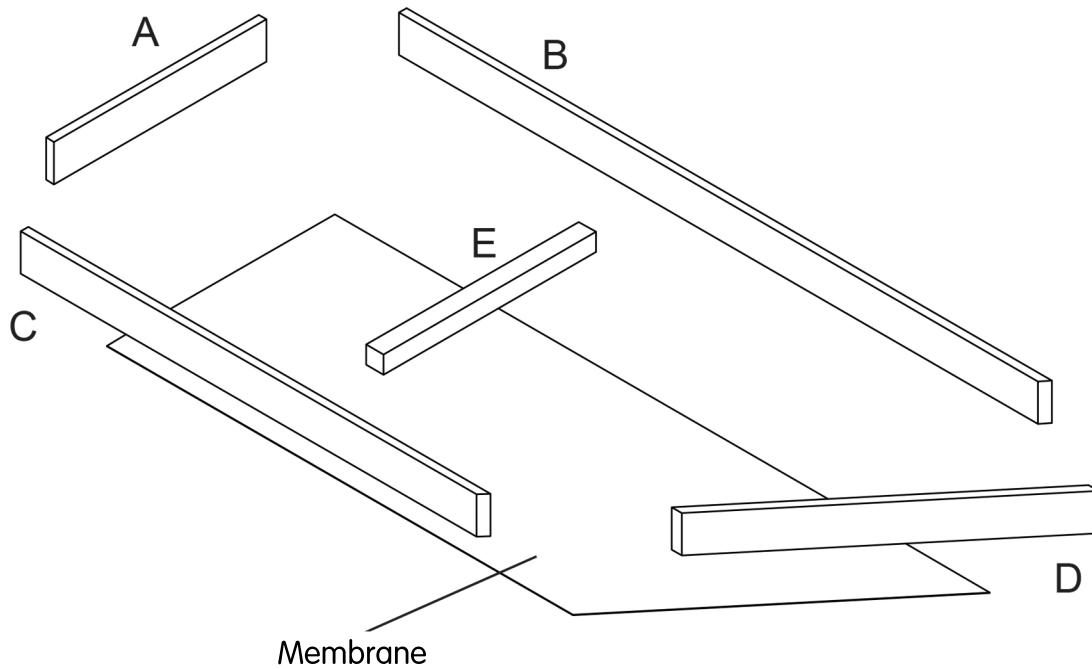

- 2** Insert the screws into the pre-drilled holes.

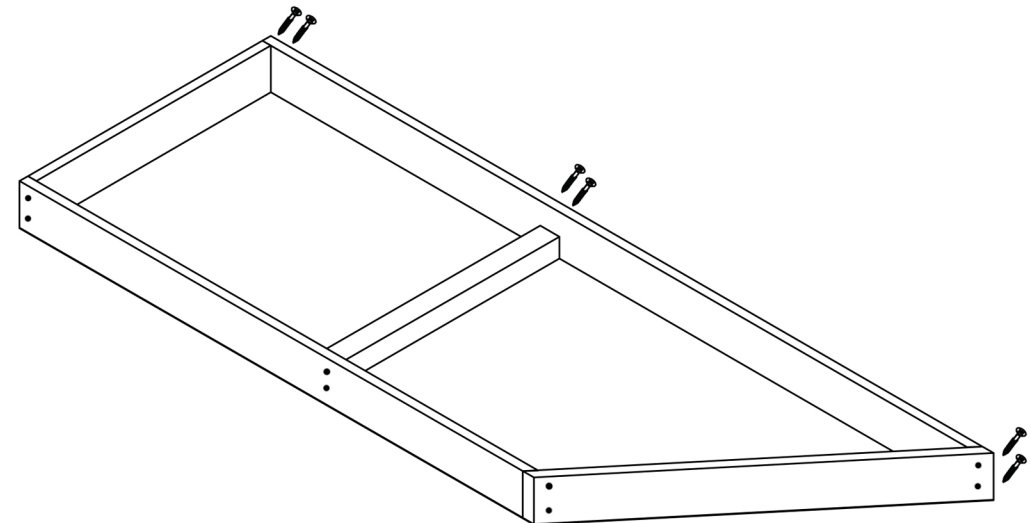

Fixings:

Screws  
12 X 6mm